

## Lys udstyr på gimle.

### Over scenen:

40 stk. Robe Parfect100 i mode2 (9 kanaler).  
06 stk. Robe Robin DLX profil i mode2 (25 kanaler).  
02 stk. Martin atomic3000 (4 kanaler).  
04 stk. Spotlight FresneLED (1 kanal) house light.  
02 stk 4-lite blinder

### Front:

08 stk. Robe parfect100 i mode2 (9 kanaler) med 20 graders filter.  
03 stk. Altman phoenix profil (5 kanaler) RGBWD 36 grader.

### Floor:

06 stk. Robe parfect100 i mode2 (9 kanaler).


### Pult:

01 stk. Chamsys MQ70.


### Strøm:

02 stk. 3 X 16A CEE  
01 stk. 3 X 32A CEE  
01 stk. 3 X 63A CEE

show/Gimle NY led : Flown Plot Heads

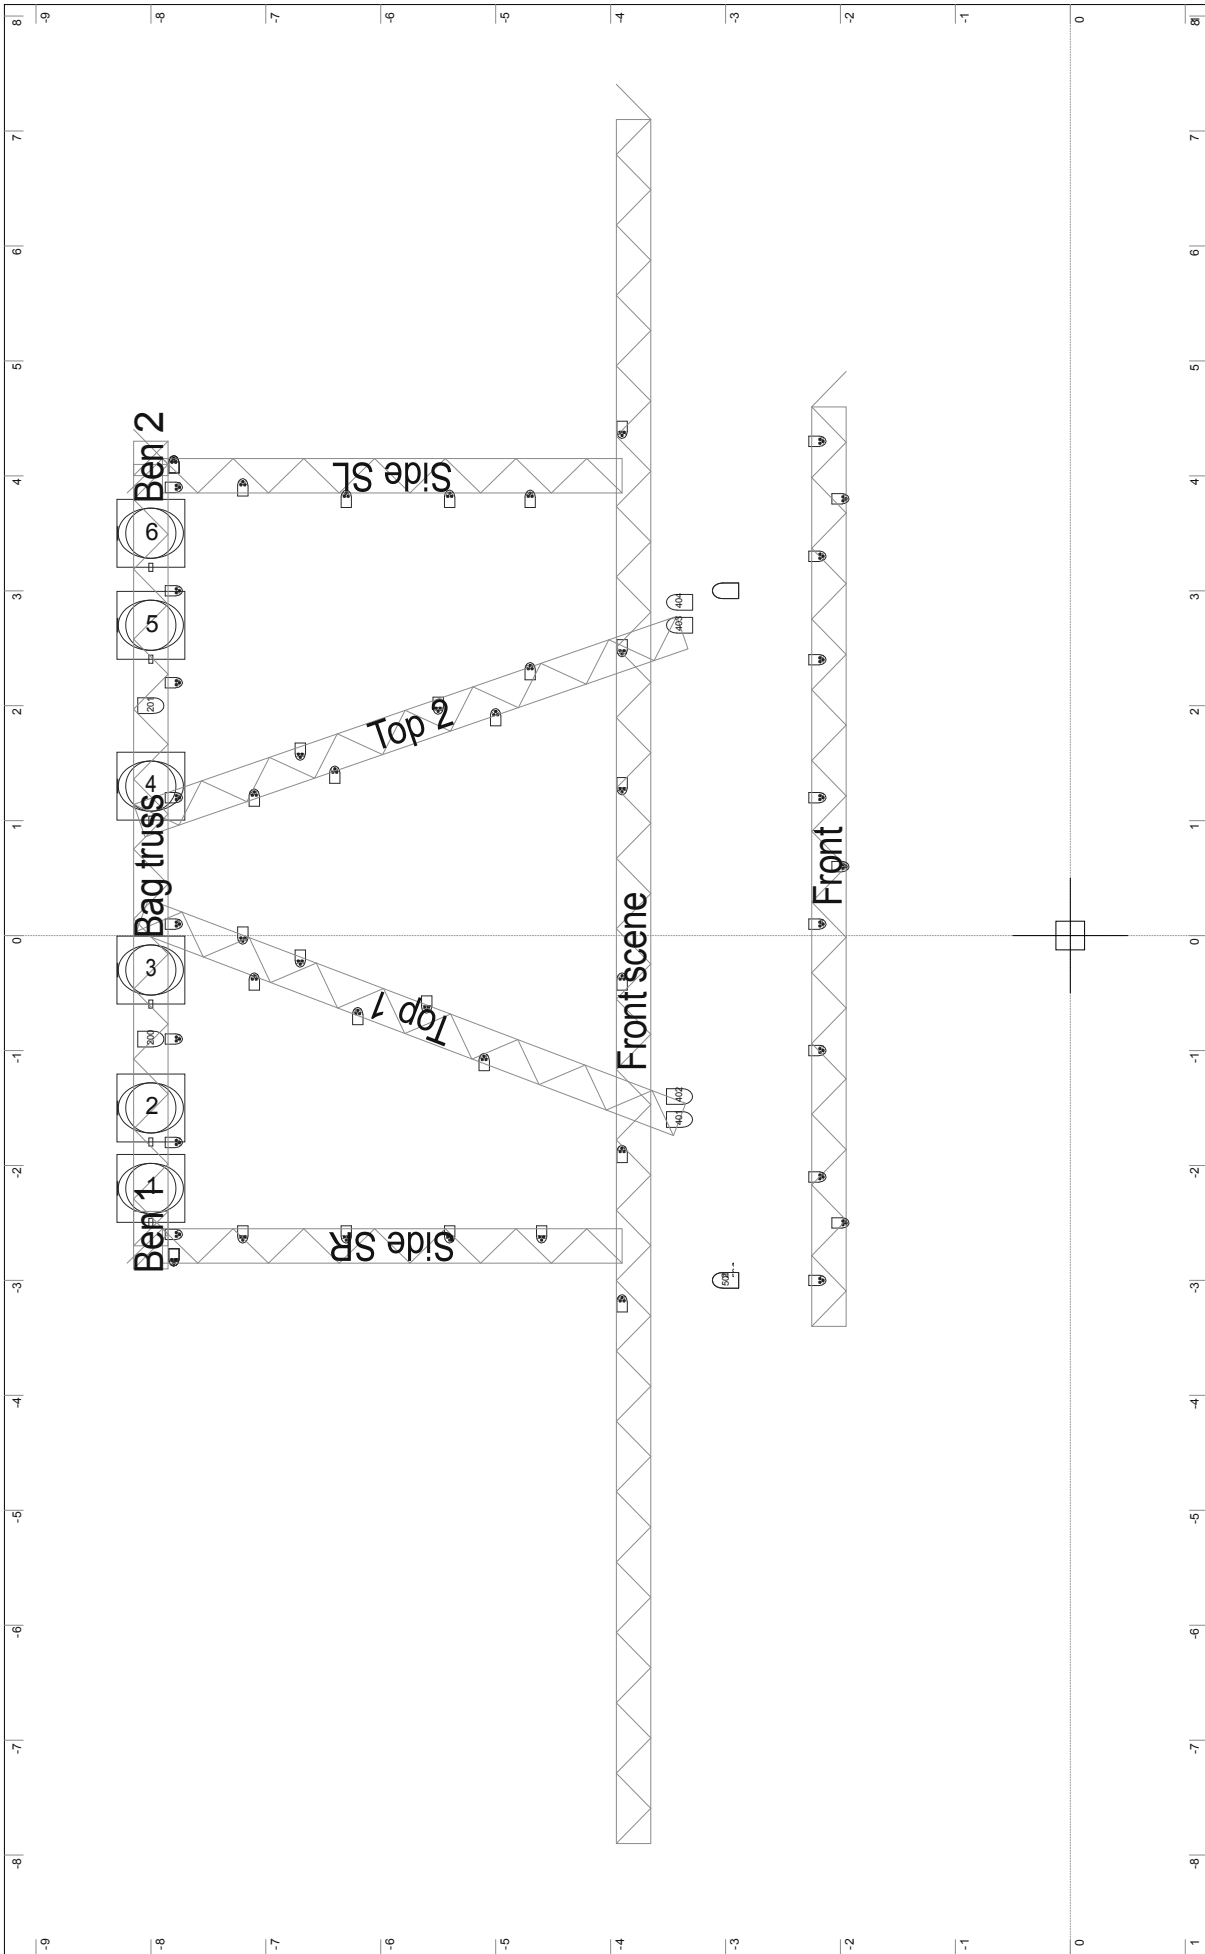

show/Gimle NY led : Floor Plot Heads

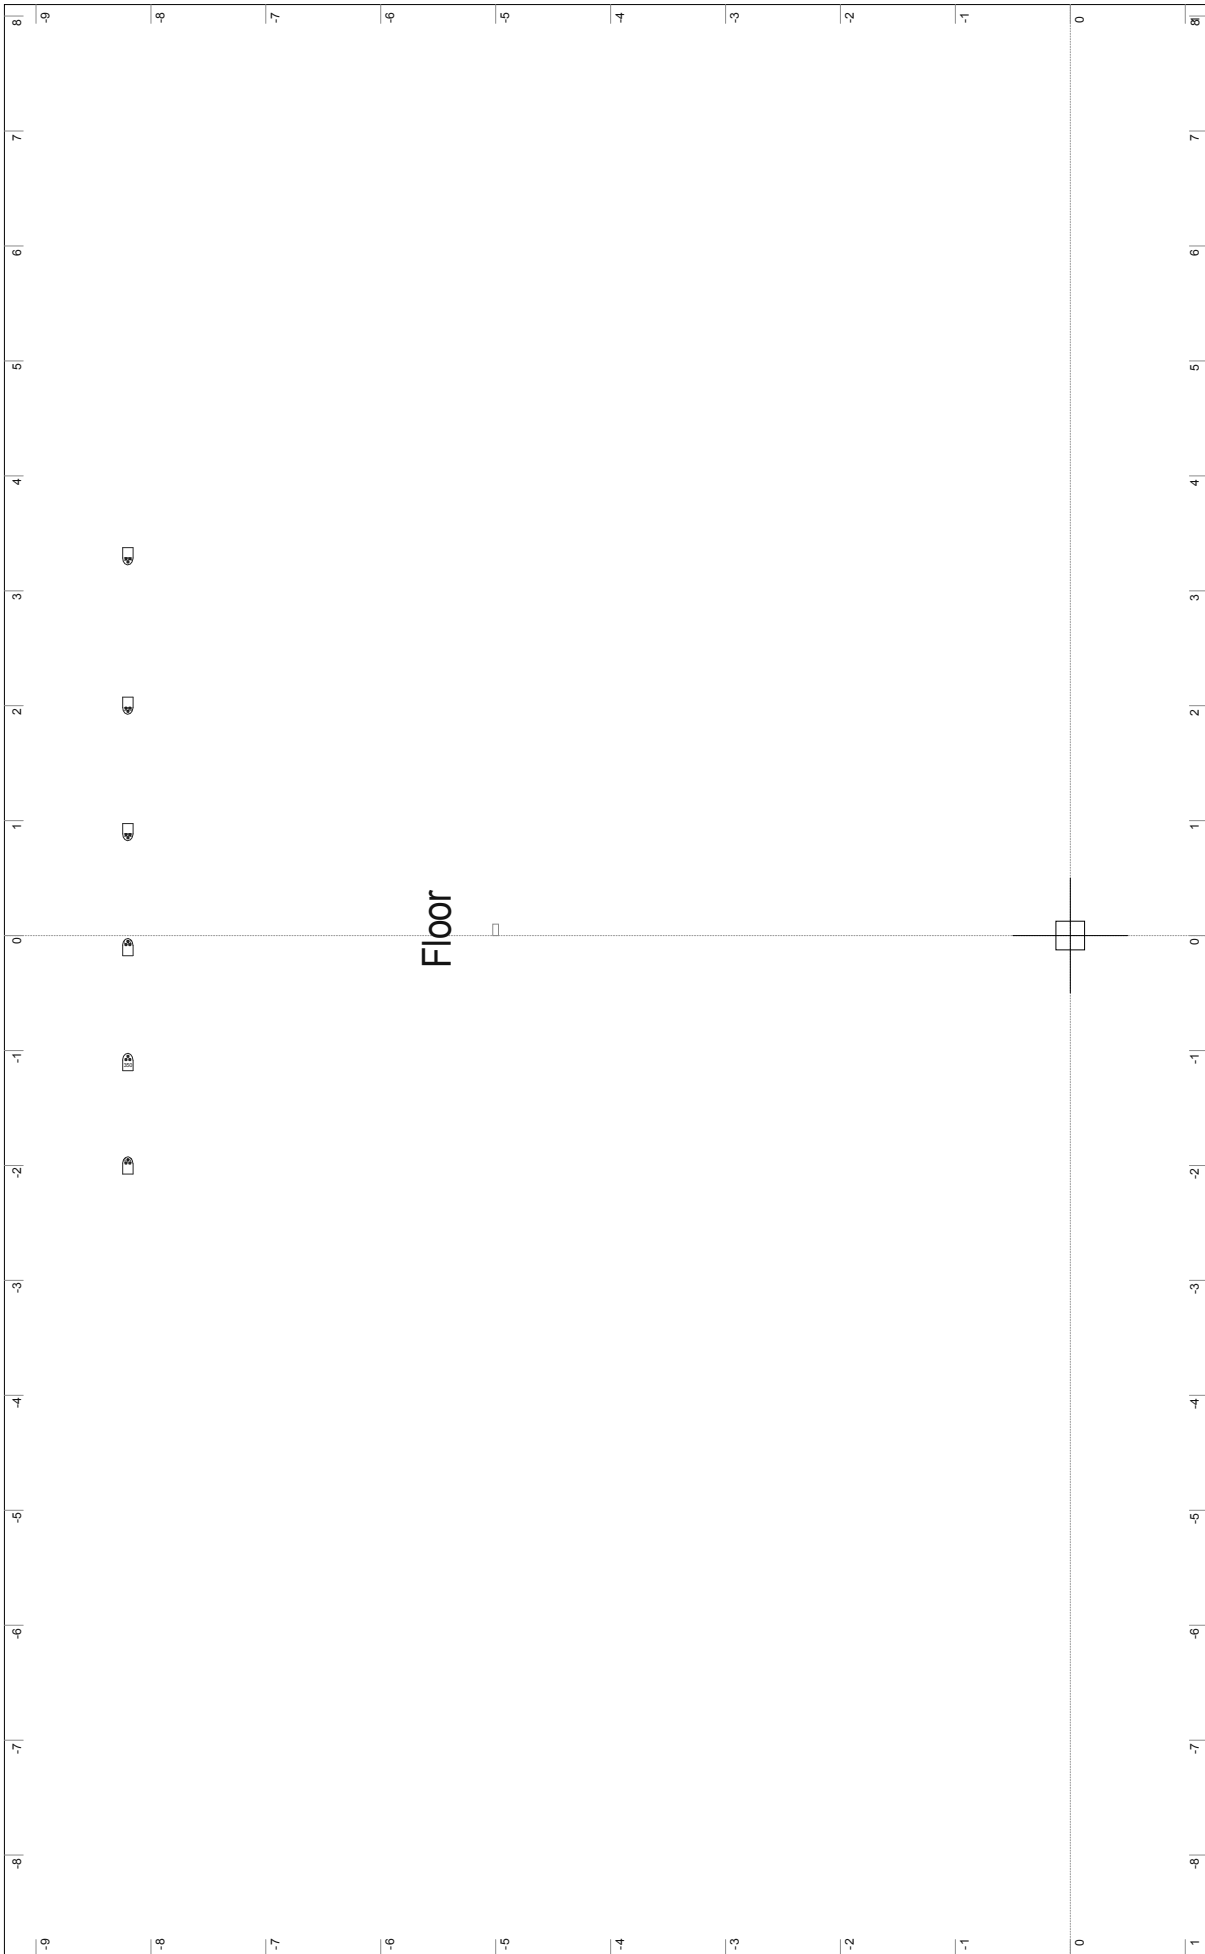

## show/Gimle NY led : Fixture Patch

Head No	DMX	Position	Manufacturer	Model	Mode
1	01-001	Bag truss	Robe	RobDLXSpot	Mode 2 RGB
2	01-026	Bag truss	Robe	RobDLXSpot	Mode 2 RGB
3	01-051	Bag truss	Robe	RobDLXSpot	Mode 2 RGB
4	01-076	Bag truss	Robe	RobDLXSpot	Mode 2 RGB
5	01-101	Bag truss	Robe	RobDLXSpot	Mode 2 RGB
6	01-126	Bag truss	Robe	RobDLXSpot	Mode 2 RGB
200	01-151	Bag truss	Martin	Atomic	4ch
201	01-155	Bag truss	Martin	Atomic	4ch
301	02-001	Bag truss	RPL	Robeparflect100	Mode2
302	02-010	Bag truss	RPL	Robeparflect100	Mode2
303	02-019	Bag truss	RPL	Robeparflect100	Mode2
304	02-028	Bag truss	RPL	Robeparflect100	Mode2
305	02-037	Bag truss	RPL	Robeparflect100	Mode2
306	02-046	Bag truss	RPL	Robeparflect100	Mode2
307	02-055	Bag truss	RPL	Robeparflect100	Mode2
308	02-064	Bag truss	RPL	Robeparflect100	Mode2
309	02-073	Side SR	RPL	Robeparflect100	Mode2
310	02-082	Side SR	RPL	Robeparflect100	Mode2
311	02-091	Side SR	RPL	Robeparflect100	Mode2
312	02-100	Side SR	RPL	Robeparflect100	Mode2
313	02-109	Top 1	RPL	Robeparflect100	Mode2
314	02-118	Top 1	RPL	Robeparflect100	Mode2
315	02-127	Top 1	RPL	Robeparflect100	Mode2
316	02-136	Top 1	RPL	Robeparflect100	Mode2
317	02-145	Top 1	RPL	Robeparflect100	Mode2
318	02-154	Top 1	RPL	Robeparflect100	Mode2
319	02-163	Top 2	RPL	Robeparflect100	Mode2
320	02-172	Top 2	RPL	Robeparflect100	Mode2
321	02-181	Top 2	RPL	Robeparflect100	Mode2
322	02-190	Top 2	RPL	Robeparflect100	Mode2
323	02-199	Top 2	RPL	Robeparflect100	Mode2
324	02-208	Top 2	RPL	Robeparflect100	Mode2
325	02-217	Side SL	RPL	Robeparflect100	Mode2
326	02-226	Side SL	RPL	Robeparflect100	Mode2
327	02-235	Side SL	RPL	Robeparflect100	Mode2
328	02-244	Side SL	RPL	Robeparflect100	Mode2
329	02-253	Front scene	RPL	Robeparflect100	Mode2
330	02-262	Front scene	RPL	Robeparflect100	Mode2
331	02-271	Front scene	RPL	Robeparflect100	Mode2
332	02-280	Front scene	RPL	Robeparflect100	Mode2
333	02-289	Front scene	RPL	Robeparflect100	Mode2
334	02-298	Front scene	RPL	Robeparflect100	Mode2
335	02-307	Ben 1	RPL	Robeparflect100	Mode2
336	02-316	Ben 1	RPL	Robeparflect100	Mode2
337	02-325	Ben 1	RPL	Robeparflect100	Mode2
338	02-334	Ben 2	RPL	Robeparflect100	Mode2
339	02-343	Ben 2	RPL	Robeparflect100	Mode2
340	02-352	Ben 2	RPL	Robeparflect100	Mode2
341	02-361	Front	RPL	Robeparflect100	Mode2
342	02-370	Front	RPL	Robeparflect100	Mode2
343	02-379	Front	RPL	Robeparflect100	Mode2
344	02-388	Front	RPL	Robeparflect100	Mode2

## show/Gimle NY led : Fixture Patch

Head No	DMX	Position	Manufacturer	Model	Mode
345	02-397	Front	RLP	Robeparfect100	Mode2
346	02-406	Front	RLP	Robeparfect100	Mode2
347	02-415	Front	RLP	Robeparfect100	Mode2
348	02-424	Front	RLP	Robeparfect100	Mode2
349	02-433	Floor	RLP	Robeparfect100	Mode2
350	02-442	Floor	RLP	Robeparfect100	Mode2
351	02-451	Floor	RLP	Robeparfect100	Mode2
352	02-460	Floor	RLP	Robeparfect100	Mode2
353	02-469	Floor	RLP	Robeparfect100	Mode2
354	02-478	Floor	RLP	Robeparfect100	Mode2
355	02-487	Front	RLP	Gimleprofil	
356	02-492	Front	RLP	Gimleprofil	
357	02-497	Front	RLP	Gimleprofil	

## show/Gimle NY led : Fixture Patch

Head No	Head Name	Gel	Position	DMX	DMX	DMX	DMX	DMX	DMX
401	House		Top 2	02-502					
402	House		Top 2	02-503					
403	House		Top 1	02-504					
404	House		Top 1	02-505					
501	Blind		Front scene	02-506					
502	Blind		Front scene	02-507					
503	Blind		Front scene	02-508					
504	Blind		Front scene	02-509					
1001	Rog			01-500					
1002	Blaes			01-501					

## show/Gimle NY led

Name	Position	Size	Weight of fixtures	DMX Universes
Bag truss	(-2.9, -8.0) Trim: 7.0	Length: 7.0 ( 0.3x 0.3)	124.8	1, 2
Side SR	(-2.7, -3.9) Trim: 7.0	Length: 4.0 ( 0.3x 0.3)	0.0	2
Side SL	( 4.0, -3.9) Trim: 7.0	Length: 4.0 ( 0.3x 0.3)	0.0	2
Front scene	(-7.9, -3.8) Trim: 7.0	Length: 15.0 ( 0.3x 0.3)	0.0	2
Top 1	(-1.6, -3.4) Trim: 7.3	Length: 5.0 ( 0.3x 0.3)	0.0	2
Top 2	( 1.0, -8.1) Trim: 7.3	Length: 5.0 ( 0.3x 0.3)	0.0	2
Front	(-3.4, -2.1) Trim: 7.3	Length: 8.0 ( 0.3x 0.3)	0.0	2
Ben 1	(-2.7, -8.0) Trim: 4.8	Length: 2.0 ( 0.3x 0.3)	0.0	2
Ben 2	( 4.0, -8.0) Trim: 4.8	Length: 2.0 ( 0.3x 0.3)	0.0	2
Floor	( 0.0, -5.0) Trim: -2.4	Length: 0.1 ( 0.1x 0.1)	0.0	2

Weights include only fixtures for which the weight is specified in MagicQ. The indicated weight does not include rigging, cableing or the truss itself.